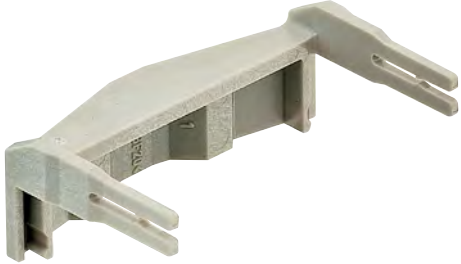 

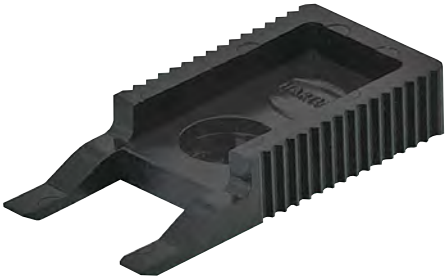 







 
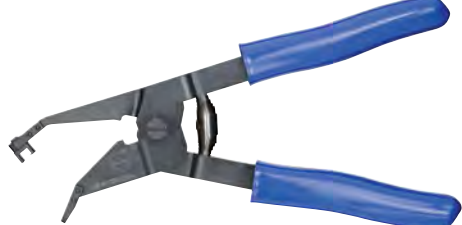 









Identification	Wire cross section (mm ²)	Part number	
<p>Han-Yellock[®], Removal tool, for Han-Yellock[®] modules and frames, thermoplastic</p>		11 99 000 0001	
<p>Han-Yellock[®], Removal tool, for Han-Yellock[®] modules and frames, metal</p>		11 99 000 0002	
<p>Han-Modular[®], Removal tool, for all Han-Modular modules in plastic frames, Insert the tool from the termination side between plastic frame and module and remove the module by applying slight pressure from the mating side. You need 2 pieces for the removal of a single module and 4 pieces for the double module.</p>		09 99 000 0331	
<p>Removal tool, for the Han[®] 100 A single module, for Han[®] GND</p>		09 99 000 0827	
<p>Han-Modular[®], Han-Eco[®], Han-Yellock[®], Removal tool, metal, for single modules, Insert the tool from the termination side between plastic frame and module and remove the module by applying slight pressure from the mating side.</p>		09 99 000 0828	

Identification	Wire cross section (mm ²)	Part number	
<p>Han-Modular[®], Removal tool, metal, for double modules, Insert the tool from the termination side between plastic frame and module and remove the module by applying slight pressure from the mating side.</p>		09 99 000 0842	
<p>Removal tool, for LC contact in the Han[®] LC module</p>		09 99 000 0843	
<p>Han D[®], Replacement-tip, for 09 99 000 0012</p>		09 99 000 0004	
<p>Han D[®], Removal tool, Insert tool from the mating side of the connector until it comes to a stop., By putting additional pressure on the tool the contact is unlocked and pushed out towards the termination side., When using the removal tool (...0052) the contact is unlocked by pushing the central plunger.</p>		09 99 000 0012	
<p>Han D[®], Removal tool, Service</p>		09 99 000 0052	
<p>Han[®] C, Removal tool</p>	1.5–6 10	09 99 000 0305 09 99 000 0381	
<p>Han E[®], Removal tool for crimp contacts, Insert the tool from the termination side until it comes to a stop., After that the contact with the attached wire can be pulled out of the isolator body.</p>		09 99 000 0319	
<p>Removal tool for crimp contacts, for contact in the multi module</p>		09 99 000 0328	
<p>Han[®] EasyCon, Removal tool, For assembly and disassembly of shield- ing clamps.</p>		09 99 000 0334	
<p>Han-Modular[®], Insertion and removal tool, for D-Sub crimp contact</p>		09 99 000 0368	

Identification	Wire cross section (mm ²)	Part number	
Han-Quintax [®] , Removal tool, for Quintax contact		09 99 000 0323	
Removal tool, for locking sleeves in the HV module, Insert from mating side.		09 99 000 0327	
Removal tool, for the Han [®] 100 A crimp module		09 99 000 0383	
Removal tool, for the Han [®] 200 A crimp module, Insert from mating side.		09 99 000 0820	
Han [®] HC Modular, Removal tool, for Han [®] HC Modular 250 Crimp, For unlocking the fixing plate, insert from mating side.		09 99 000 0332	
Han [®] HC Individual, Removal tool		09 99 000 0826	
Han-Fast [®] Lock, Removal tool, For easier removal of the Fast-Lock con- tact from the printed circuit board.		09 99 000 0837	